
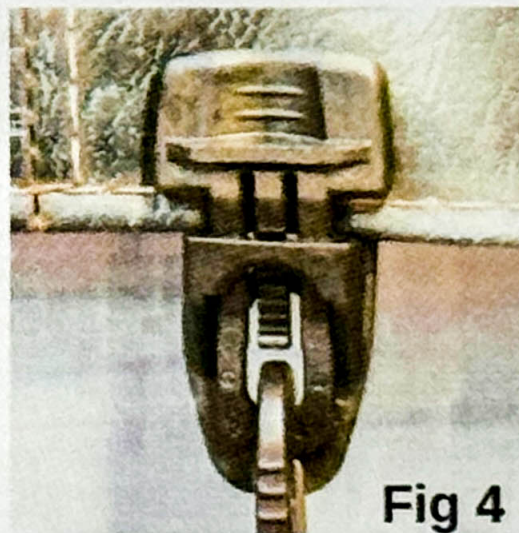
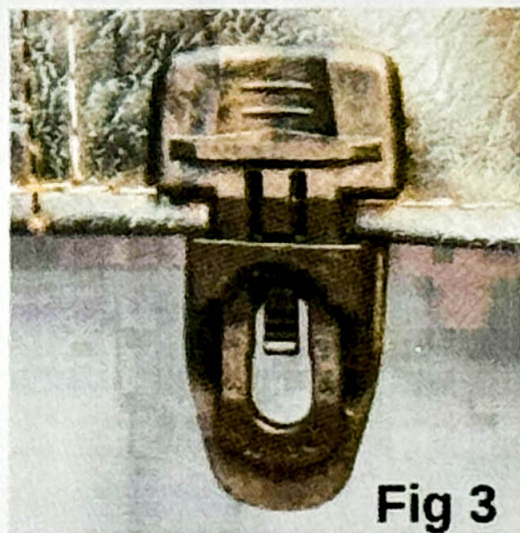
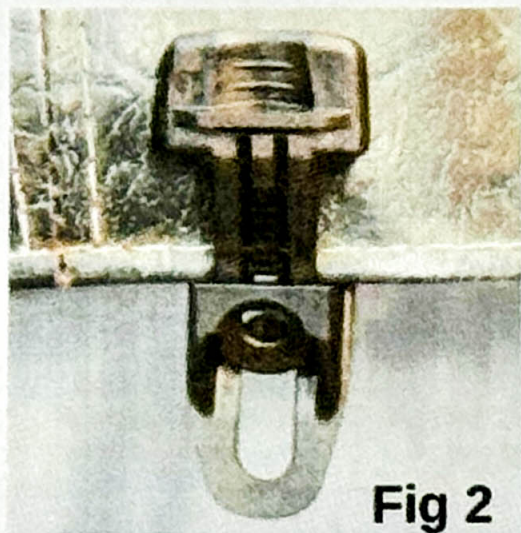


# Instructions

1. Insert spa cover between jaws of the clip as per fig 2
2. Force wedge in as far as it will go
3. Attach clip
4. Once attached pull on the clip to make the grip as tight as possible
5. Attach second part of the clip to the spa cabinet

Note: Clips may be installed facing either side out

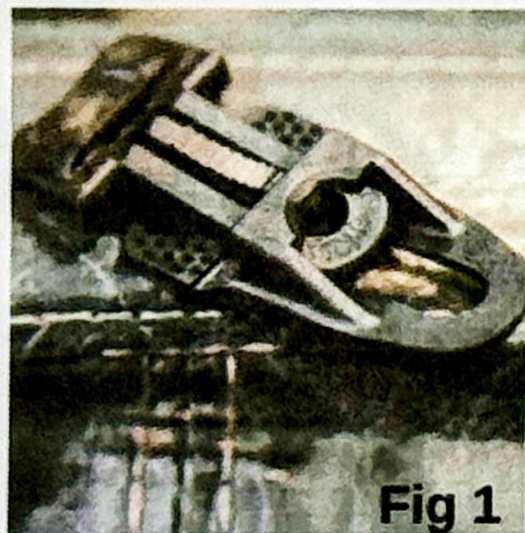

\*Please note that in all States of Australia except NSW and some areas of NT, a certified pool fence is required. In NSW the spa cover must be closed and locked when not in use with no gaps exceeding 100mm. It is not permissible to be able to unlock without the use of a tool.

These Cover Safe kits may or may not be deemed compliant for use in NSW without a certified fence for security applications. If you need this product for security in NSW, you will need to seek certifier approval and may need to secure the clip to the cover flap in a manner it cannot be loosened/removed without a tool.